

HOW TO CHECK PHASE SEQUENCE (cont'd)

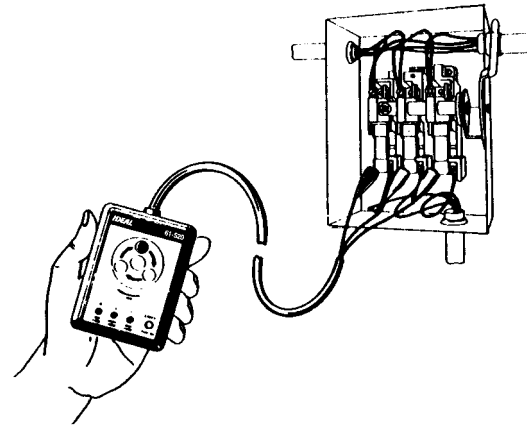


Fig. 3


WARRANTY STATEMENT

This tester is warranted to the original purchaser against defects in material and workmanship for two years from the date of purchase. During this warranty period, IDEAL INDUSTRIES, INC. will, at its option, replace or repair the defective unit, subject to verification of the defect or malfunction. This warranty does not cover fuses, batteries or damage from abuse, neglect, accident, unauthorized repair, alteration, or unreasonable use of the instrument.

Any implied warranties arising out of the sale of an IDEAL product, including but not limited to implied warranties of merchantability and fitness for a particular purpose, are limited to the above. The manufacturer shall not be liable for loss of use of the instrument or other incidental or consequential damages, expenses, or economic loss, or for any claim or claims for such damage, expenses or economic loss.

State laws vary, so the above limitations or exclusions may not apply to you. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

12/07


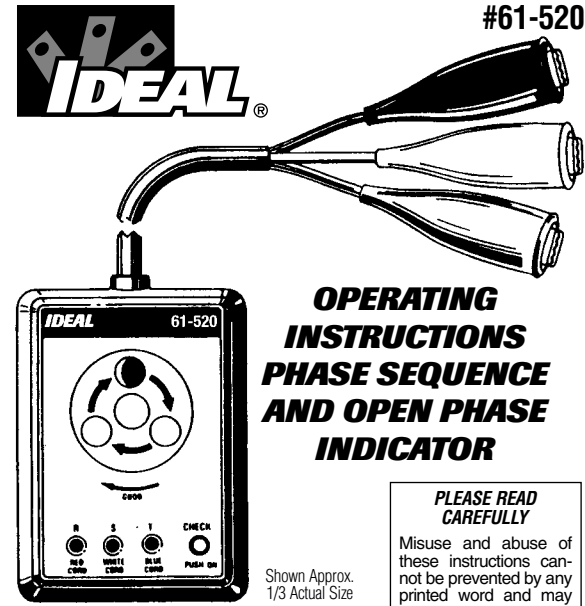


Shown Approx. 1/3 Actual Size

IDEAL INDUSTRIES, INC.  
Sycamore, IL 60178, U.S.A.  
800-304-3578 Customer Assistance  
www.idealindustries.com  
ND 1714-2

**PLEASE READ CAREFULLY**  
Misuse and abuse of these instructions cannot be prevented by any printed word and may cause injury and/or equipment damage. Please follow these instructions faithfully and adhere to all standard industry safety rules.

FRONT PANEL VIEW

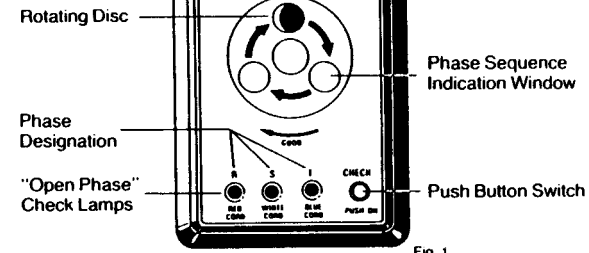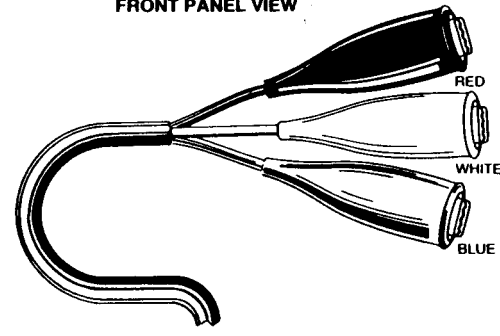

Page 3 Fig. 1.

The Model 61-520 is a positive action electrical tester and will indicate both Phase Sequence and Phase Continuity instantly and accurately.

**PACKAGING**  
Packed in handy unit box, complete with C-31 Pouch, Form ND-1714 Operating Instructions and Warranty Card, all ready to use.

HOW TO CHECK PHASE SEQUENCE (cont'd)

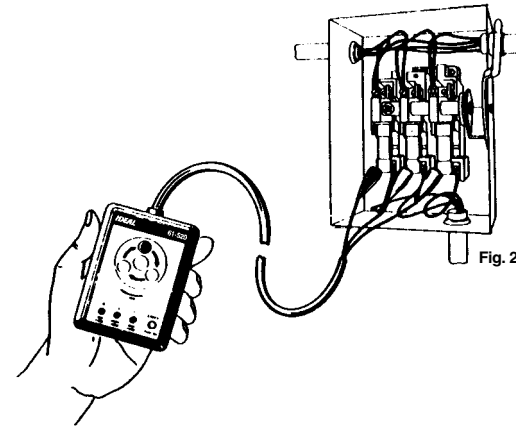


Fig. 2